

FOOT COUNTER


To replace the spool of thread, open the case and remove the old roll core. Remove the counting unit by pressing the latch toward the roll holder spindle.

As shown in the diagram, the thread first passes into the plastic mounted brass eyelet and then around the inside of the vertical post. It then wraps 3-4 times around the measuring wheel. Pull a little thread through and the thread will run towards the center of the wheel, in under the tension flap and be held by the flap.

Now pass the free end of the thread up through the tensioner eyelet and out through the exit eye.

Replace the counter till it clicks in place, pull out any slack thread so the unit is running freely and tie off the free end onto the snagging washer on the outside rear of the case. Close the case lid and reset the counter to zero.

Doubling the end of the thread makes it stiffer

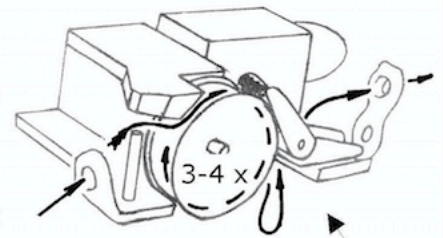

To easily thread this eye, turn the counter over.